



Toll Free: 87 PERMATEX
(877-376-2839)

10 Columbus Blvd., Hartford,
Connecticut 06106

6875 Parkland Boulevard, Solon
Ohio 44139

Technical Data Sheet

Permatex[®] Fabric Repair

AAM Revised 03/14

PRODUCT DESCRIPTION

S.I.N.: 834-300

Permatex[®] Fabric Repair is a complete all purpose fabric mender that may be used to repair all types of fabric colors and textures.

PRODUCT BENEFITS

- Washable
- Repairs a wide variety of colors and textures


TYPICAL APPLICATIONS

- Auto fabric and Upholstery repairs
- Carpet
- Hems
- Seams
- Patches
- Repairs

DIRECTIONS FOR USE

If you can obtain a scrap piece of fabric, make a practice repair on it. Read all of the steps before making an actual repair.

1. Clean the damaged spot to be repaired with a household cleaner. Trim off any loose threads. If any padding is missing beneath the damaged spot, and the damage is depressed, fill in that area with common household cotton. Spread the cotton evenly into and beneath the damaged spot (only if needed).
2. Mix the fabric powders together in the empty container with the round ball in it, to obtain the correct color. Shake the container, after the colors you select to match your fabric are in the container, for 30 – 45 seconds. This will mix the colors thoroughly. Use the color chart as a guide to help you match the colors.
3. If the damage is a hole or larger, a backing support is needed under the damaged spot. Cut the backing fabric in this kit, slightly larger than the damaged spot, and insert it into and under the damage as support.
4. Using the spatula, apply the clear air drying adhesive (milky white adhesive-dries clear) into the damaged spot. Fill it into the top of the damage, as evenly as possible, using the spatula. Take the screen applicator, and apply the colored fabric powders onto it. Hold the screen directly above the adhesive and shake the screen. This will sift the fabric powders onto the clear adhesive. Cover the adhesive completely with the colored fabric powders. Use the spatula to pack down the fabric powders into the adhesive, and then duplicate the patterns in the fabric with the spatula. Allow to dry for several hours (overnight preferred). After the repair area is dry, blow off any excess fabric powders.

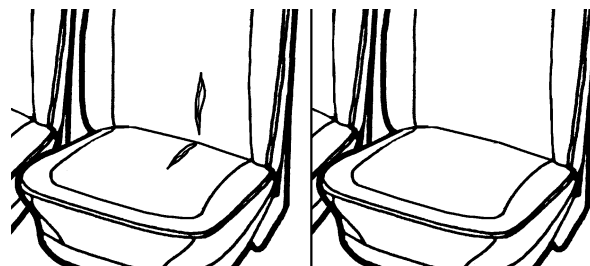

5. If the spot being repaired is in an area that gets hard wear, you can protect it by lightly spraying a clear (aerosol preferred) hair spray over the area. Do this only after the repaired area is dry. Only spray a light coat onto the area that was repaired.

Color Matching Tips

The fabric powders in your kit can be mixed to match many colors. By putting the fabric powders into the container with the marble ball and shaking thoroughly, they will mix together readily.

Additional colors can always be added to improve the color match.

Repair Tip

After the repair is finished (before it is dry) you can use the edge of your spatula to put designs or lines into the repair job to duplicate the pattern of the fabric. If the damaged is very large, the spot can be sewn with a needle and thread to strengthen the spot. Working the adhesive under the edges of the damage will also make for a stronger repair job. Repair professional often sew the damage before doing the repair job.

For Cleanup

1. To clean up while still wet, use water.
2. For dry clean-up, use naphtha.
3. Wash hands with Permatex[®] brand hand cleaners when finished

PROPERTIES OF UNCURED MATERIAL

| | Typical Value |
|---------------|---------------|
| Chemical Type | Vinyl resin |

GENERAL INFORMATION

This product is not recommended for use in pure oxygen and/or oxygen rich systems and should not be selected for use with chlorine or other strong oxidizing materials.

For safe handling information on this product, consult the Material Safety Data Sheet, (MSDS).

NOT FOR PRODUCT SPECIFICATIONS.

THE TECHNICAL DATA CONTAINED HEREIN ARE INTENDED AS REFERENCE ONLY.

PLEASE CONTACT PERMATEX, INC., TECHNICAL SERVICE DEPARTMENT FOR ASSISTANCE AND RECOMMENDATIONS FOR YOUR SPECIFIC APPLICATION.
PERMATEX, INC., HARTFORD SQUARE NORTH, 10 COLUMBUS BOULEVARD, HARTFORD, CT 06106 PHONE - (1-87PERMATEX)

ORDERING INFORMATION

| Part Number | Container Size |
|-------------|----------------|
| 25247 | 1 kit, carded |

STORAGE

Products shall be ideally stored in a cool, dry location in unopened containers at a temperature between 8° to 28°C (46° to 82°F) unless otherwise labeled. Optimal storage is at the lower half of this temperature range. To prevent contamination of unused product, do not return any material to its original container.

NOTE

The data contained herein are furnished for information only and are believed to be reliable. We cannot assume responsibility for the results obtained by others over whose methods we have no control. **Permatex, Inc. specifically disclaims all warranties expressed or implied, including warranties of merchantability or fitness for a particular purpose, arising from sale or use of Permatex, Inc. products and disclaims any liability for consequential or incidental damages of any kind, including lost profits.** This product may be covered by one or more United States or foreign patents or patent applications.